

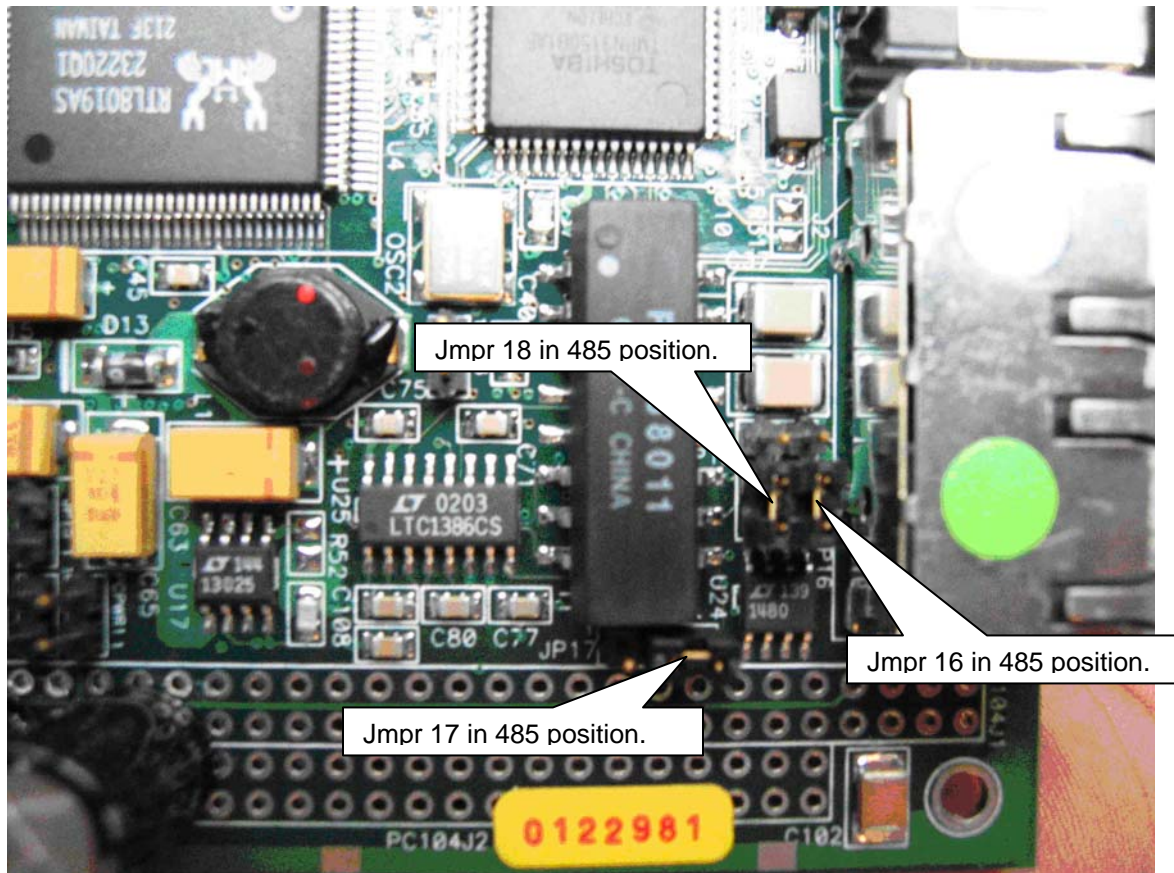


Configuring the FS-B20 serial port to work as RS-485:

Jumper Settings:



You will need to change jumpers jp16, jp17, and jp18 from pins 1-2 to pins 2-3 in order to enable RS-485. These jumpers can be found just behind the RJ45 ports when you open the box

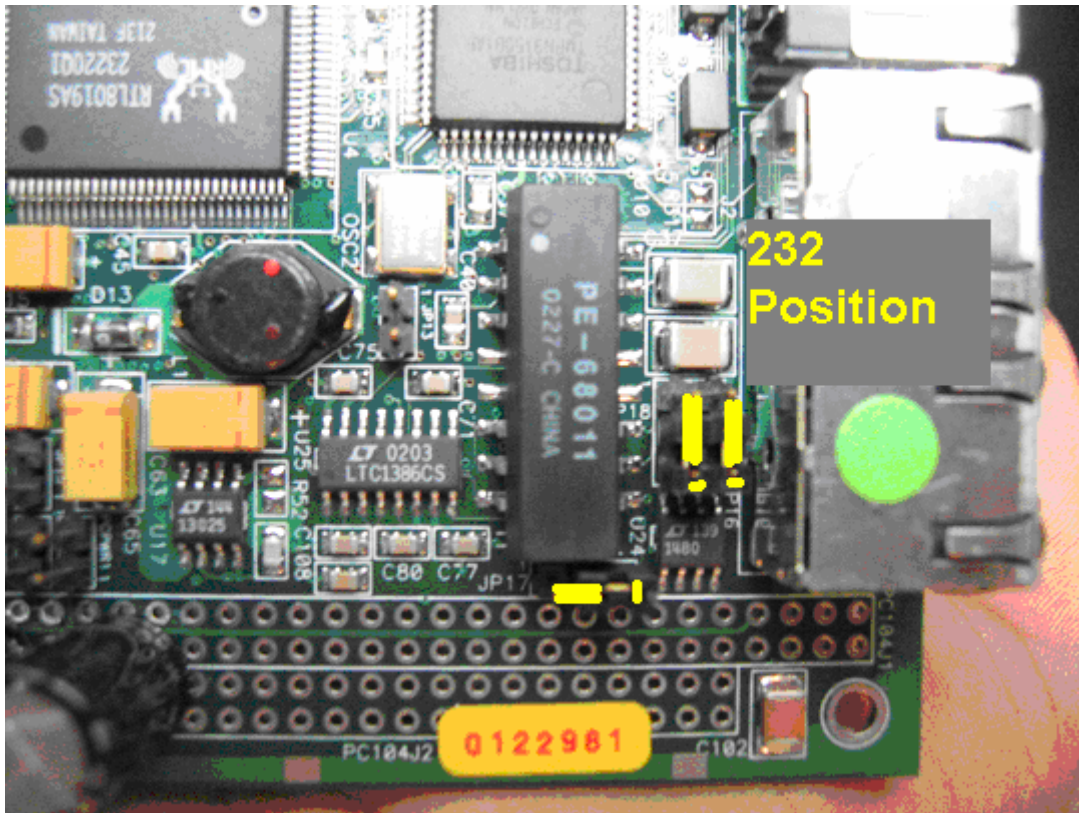

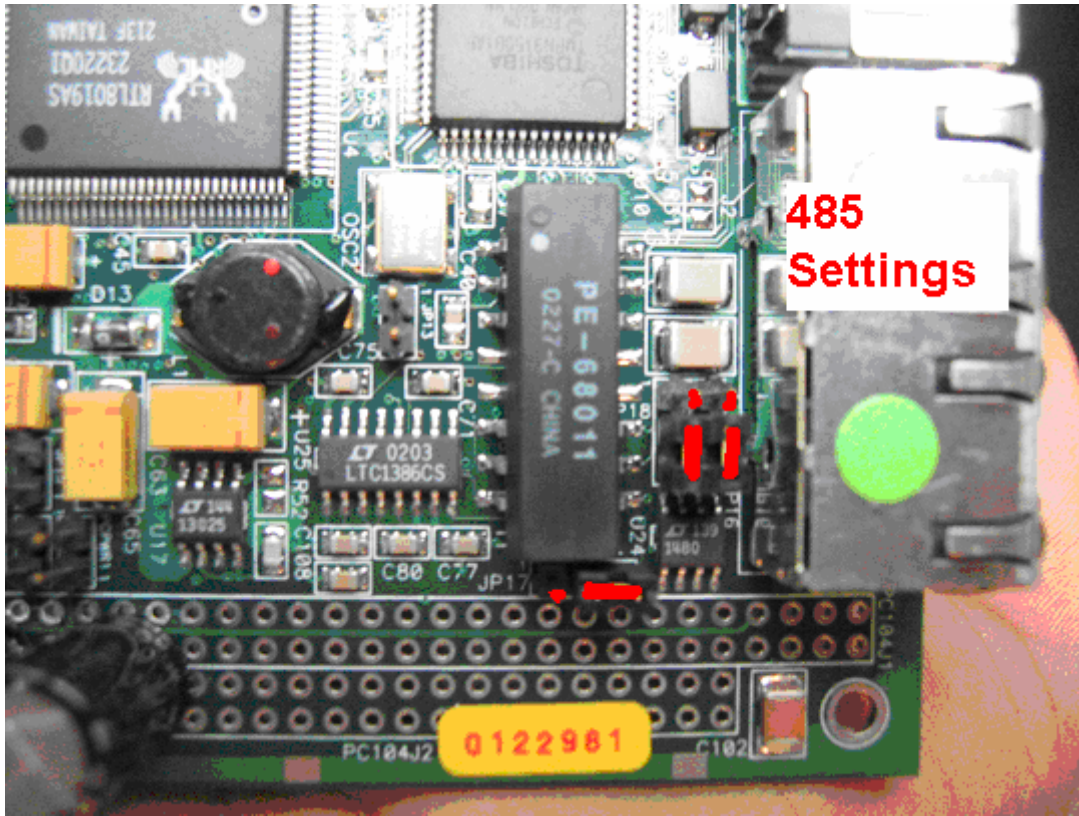

Hardware connections

The FS-8917-16 pigtail cable is typically used for this port arrangement. Connection is depicted in the following diagram.

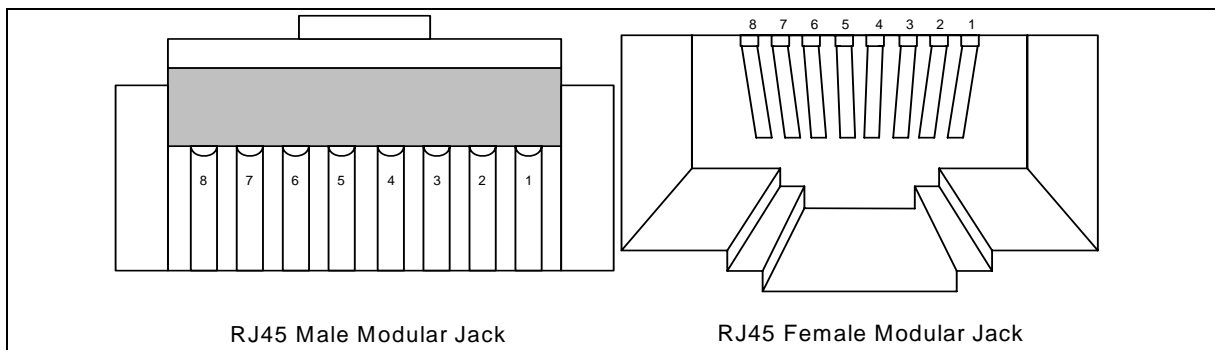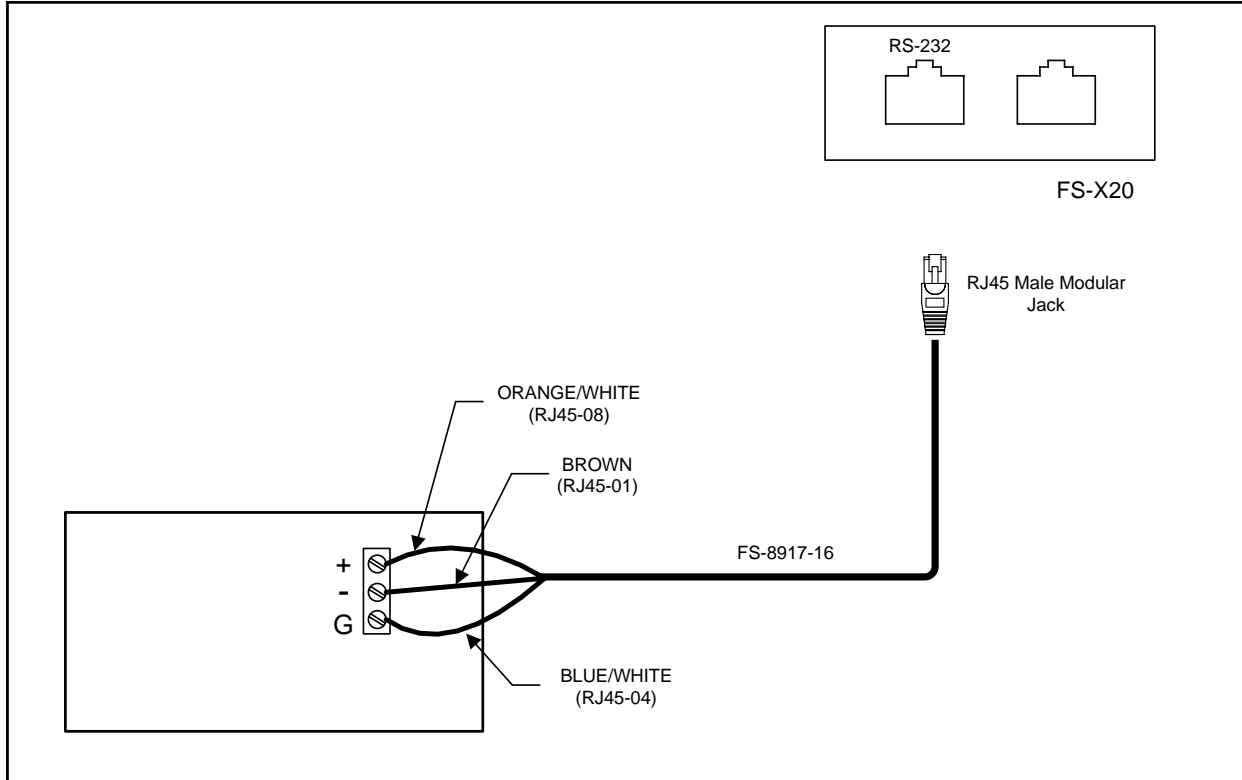

Configuration Settings

The Port address in the Configuration needs to be set to R1 instead of P1.

Doc. No. ENOTE0017	Rev. 6
-----------------------	-----------

THIS PAGE INTENTIONALLY LEFT BLANK