



Installing New Firmware on a FieldServer

- 1) Open the install.zip file. This can be done directly from your mail client.
- 2) If you are using WinZip then press the “Install” button. If you do not have WinZip then extract the files to a temporary folder and run the setup.exe program
- 3) If you have only one FieldServer on your network, then the firmware install procedure will start automatically after pressing “Install”
- 4) If you have multiple FieldServers on your network, then select the FieldServer that requires the new firmware to be installed from the menu shown.
- 5) In order to download config file other than the one included in the Install.zip file do the following:

If you are using Winzip:

- Rename the file you want to download to the FieldServer as config.csv
- Click on “Add”

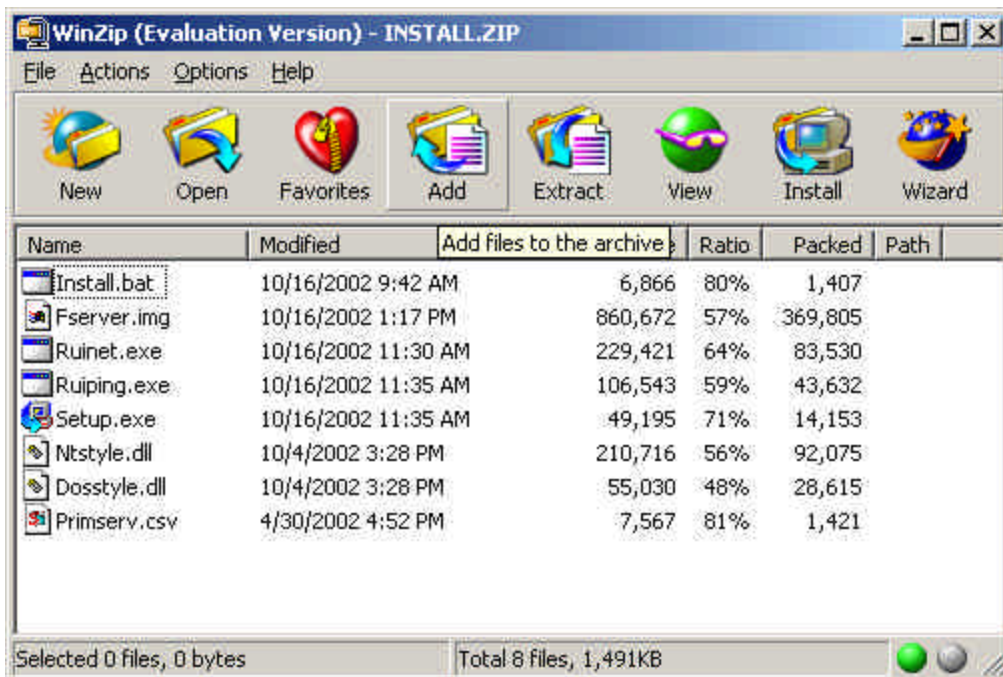

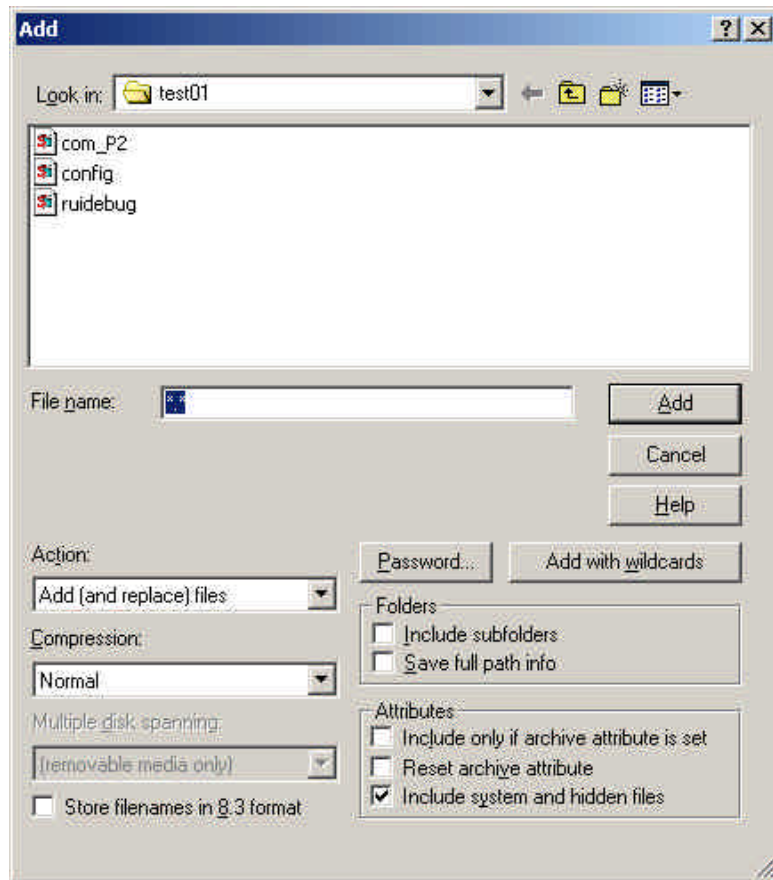

- Now you can Browse and Select the config.csv file you want to send to the FieldServer
- Then Click “Add”
- Now Click on “Install” to install the config.csv file to the FieldServer.

If you are not using WinZip:

Copy the config.csv file to the Install.zip

Note: The csv file which you add should be called config.csv

If the Install.zip file contains more than one csv file then only one csv file will be downloaded to the FieldServer.

If config.csv, primserv.csv and secdserv.csv are present then config.csv will be downloaded.

If config.csv is not present then primserv.csv will be downloaded and if config.csv and primserv.csv are not present then secdserv.csv will be downloaded.

Version:

1.00aA	11 Sep 02	BDW	Created the eNote.
1.00bA	08 Oct 02	BDW	Updated for WinZip Install use.
1.00bB	16 Oct 02	PKD	Updated for adding new csv file to Install.zip